



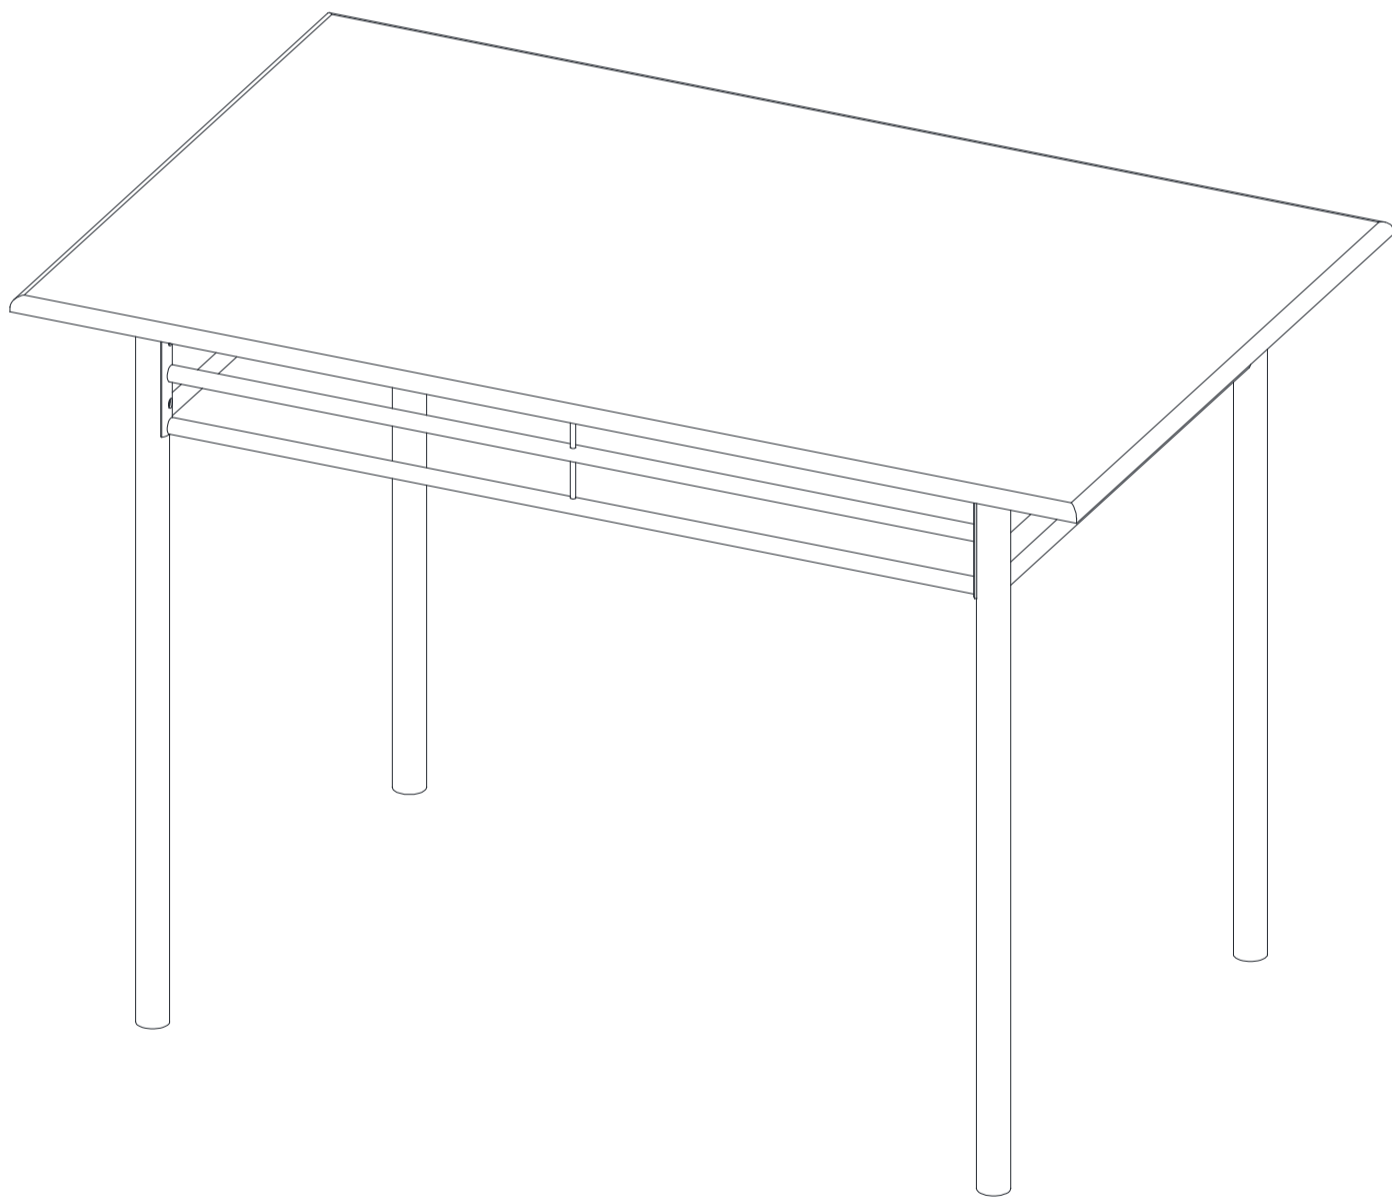

ASSEMBLY INSTRUCTION


HM16781

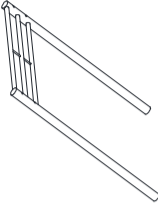


PARTS AND HARDWARE LIST

A		1PC	D	 M6*10mm	8PCS
B		2PCS	E	 M4*15mm	6PCS
C		2PCS	F	 M6	1PC

STEP 1

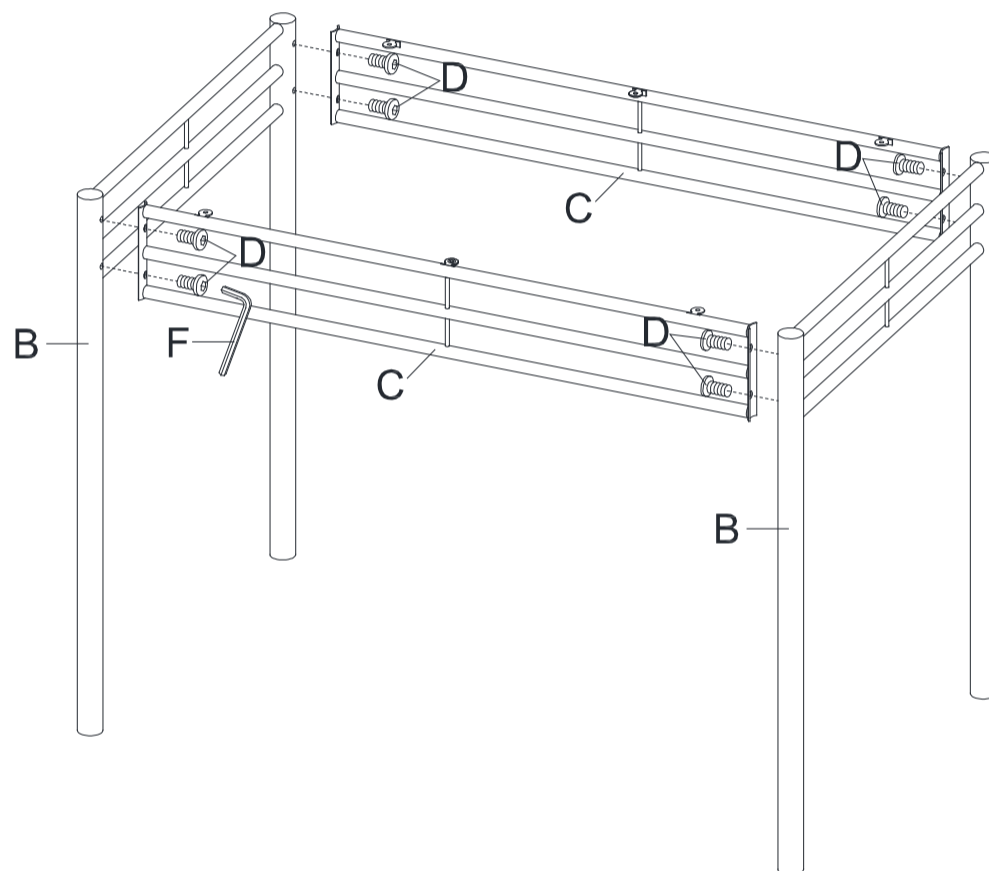


STEP 2

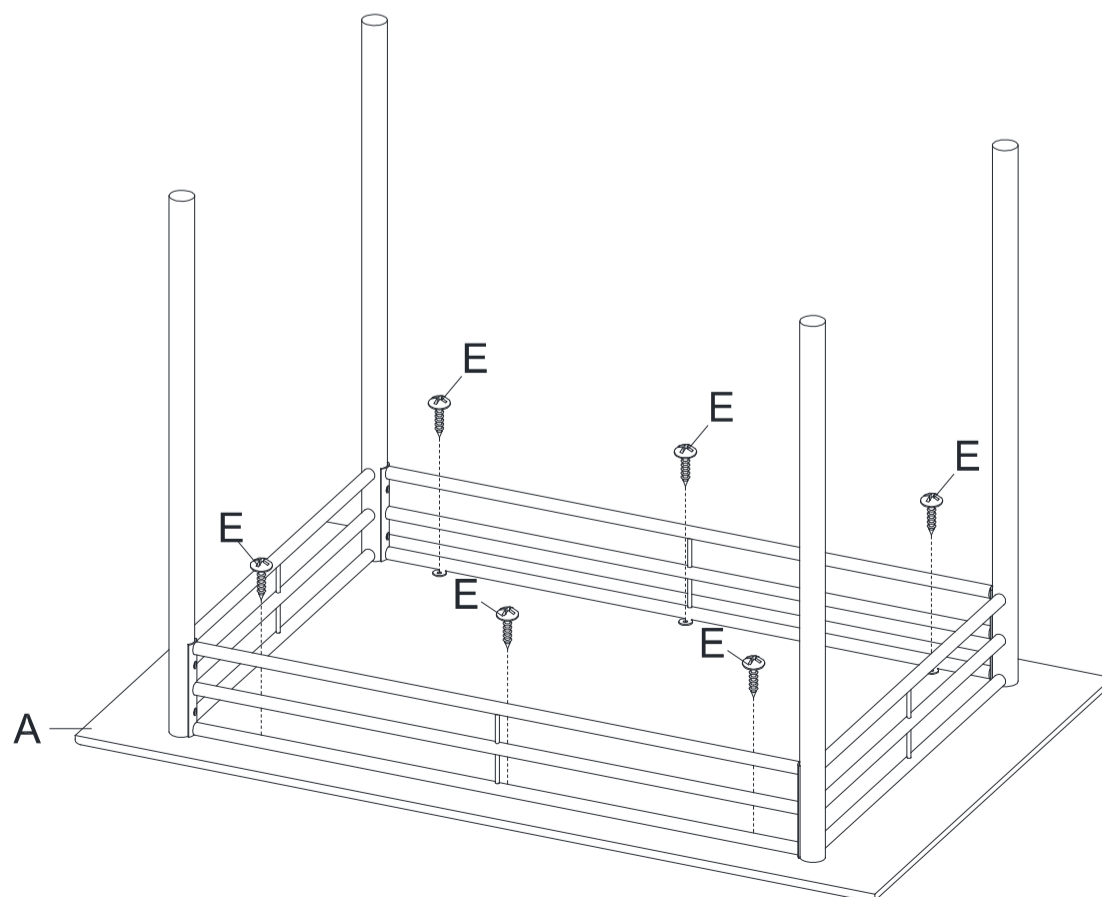



Boraam Industries
SAVANNAH X-BACK DINING CHAIR
ASSEMBLY INSTRUCTIONS

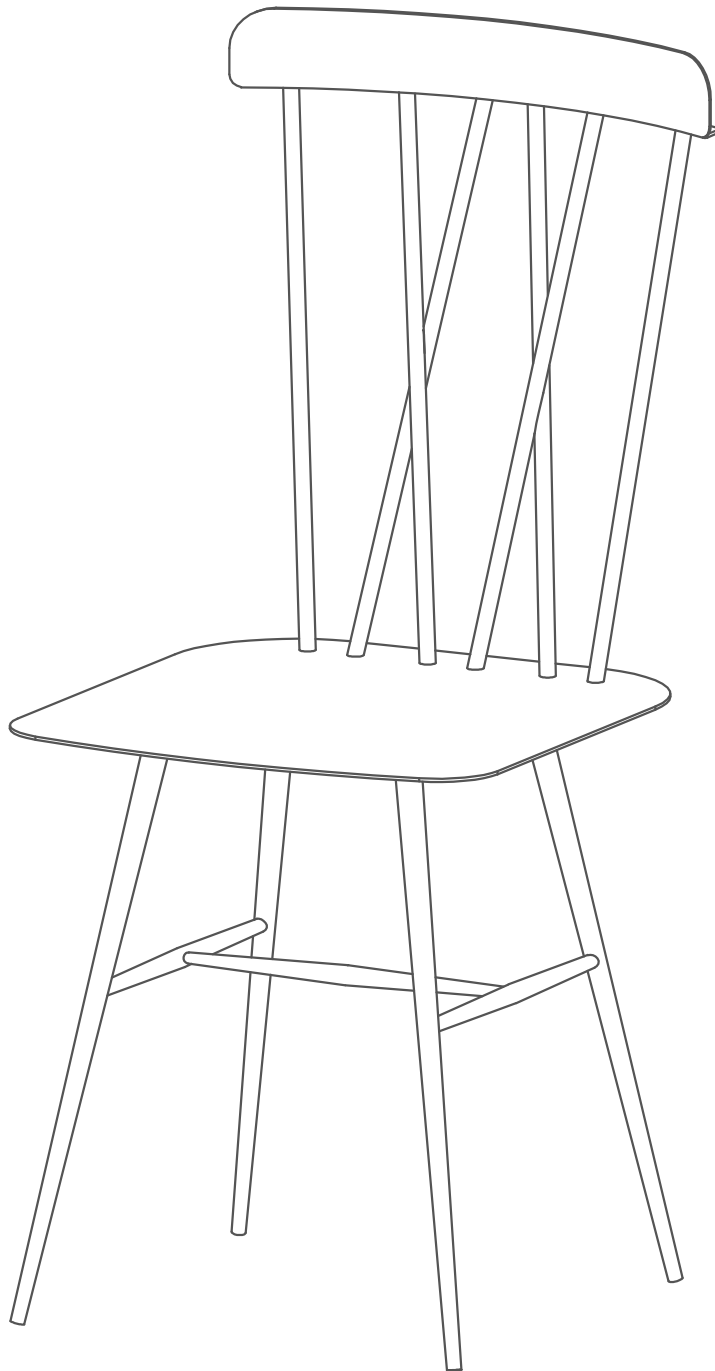



PLEASE READ ME FIRST



- Have questions about assembling your item?



- Item or parts damaged?



- Missing a part?



- We're here to help!



(847)949-6300 (M-F, 9am-5pm CST)




www.boraamindustries.com



customerservice@boraamindustries.com

A



4PCS

B



4PCS

C




4PCS


D



1PC



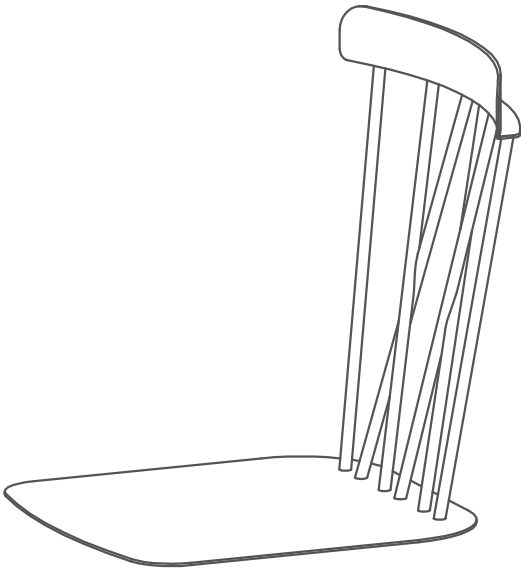


①

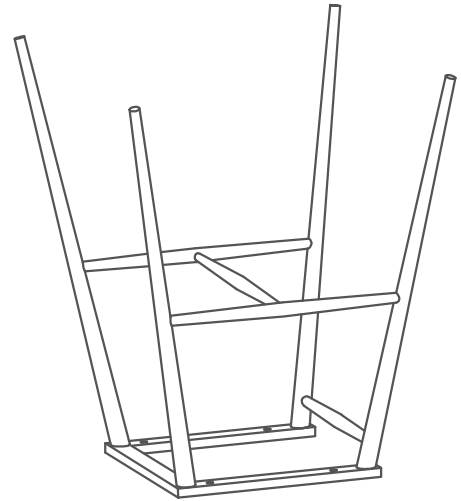

②

01

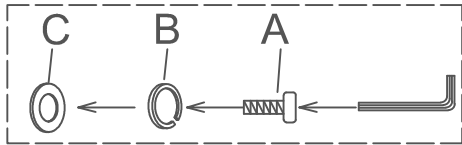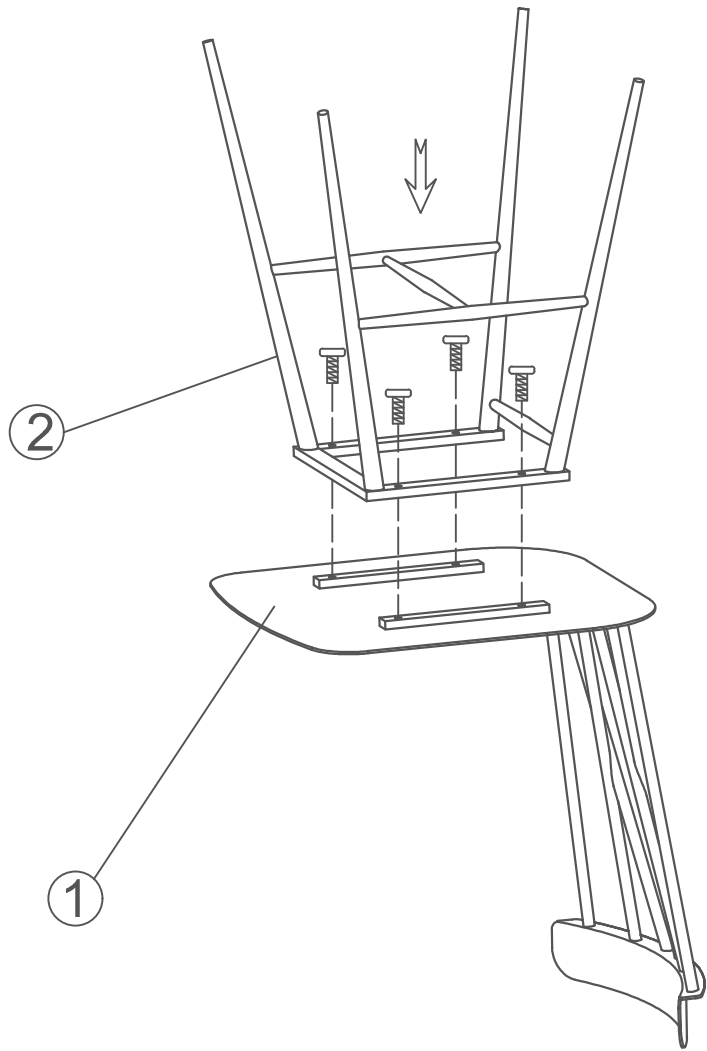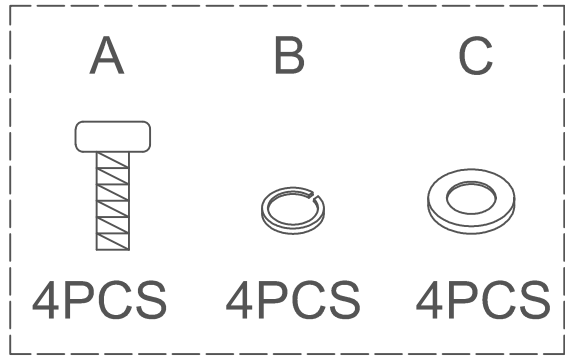

02

