




BORAAM INDUSTRIES
Assembly Instructions
CALDER BOOKCASE

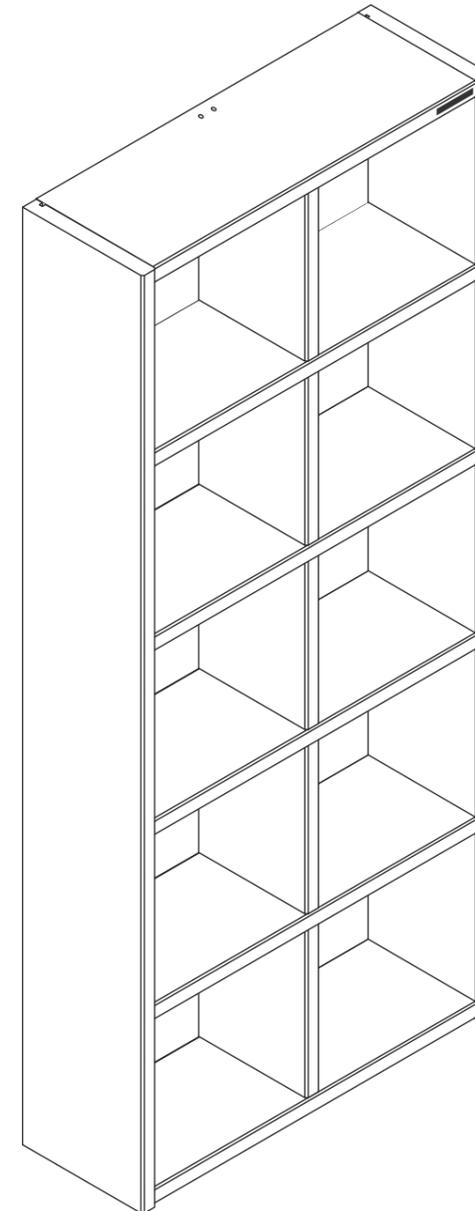

MAKE SURE ALL PARTS ARE INCLUDED PRIOR TO ASSEMBLY

TWO OR MORE PEOPLE HIGHLY RECOMMENDED FOR ASSEMBLY




DO NOT ASSEMBLE IN THE PRESENCE OF CHILDREN

Boraam CALDER BOOKCASE


A. Side Panels
1980 x 280
2 Pcs

B. Shelf Supports
361 x 260
5 Pcs


F. Back Panels
760 x 371
5 Pcs

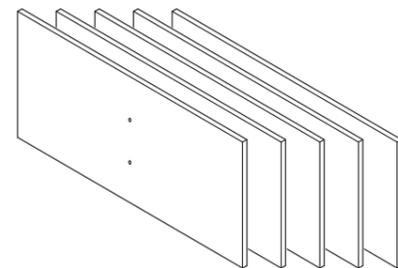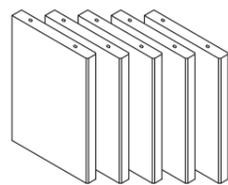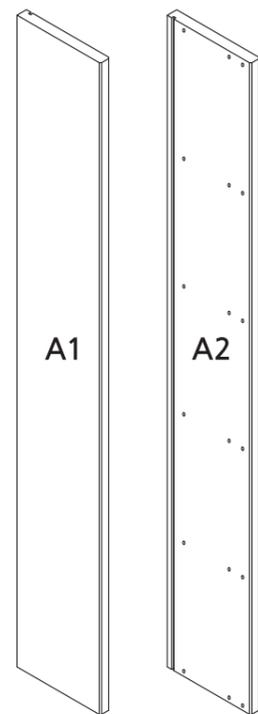


D1. Top Shelf
750 x 275
1 Pc

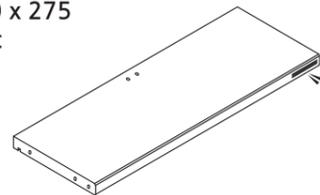

E. Middle Shelves
750 x 275
4 Pcs

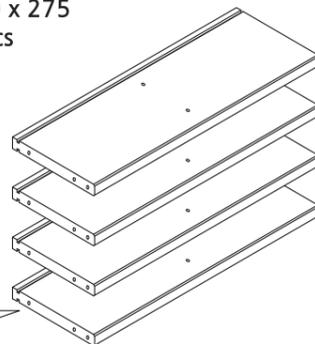

D2. Bottom Shelf
750 x 275
1 Pc

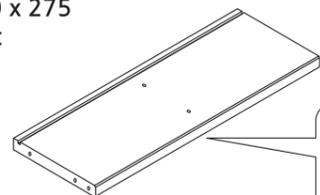

< Left > < Right >


! Cam holes are on the underside of the panel.

C. Hardware

| | | | |
|---|---|---|--|
| <p>C1. Back Panel Screw Φ4 x 16mm 10 Pcs</p> | <p>C2. Dowel Φ6 x 25mm 20 Pcs</p> | <p>C3. Safety Bracket 32 x 32mm 1 Pc</p> | <p>C4. Anchor Screw Φ3 x 21mm 2 Pcs</p> |
| <p>C5. Conical Anchor Φ6 x 30mm 1 Pc</p> | <p>C6. Safety Bracket Screw Φ4 x 25mm 1 Pc</p> | <p>C7. Cam 30T 24 Pcs</p> | <p>C8. Cam Bolt 30T 24 Pcs</p> |
| <p>C9. Dowel Φ8 x 35mm 12 Pcs</p> | | | |


Dowel holes were made purposely tight.
Please do not use excess force when inserting the Dowels.
Using excess force can damage the panels during assembly.

1

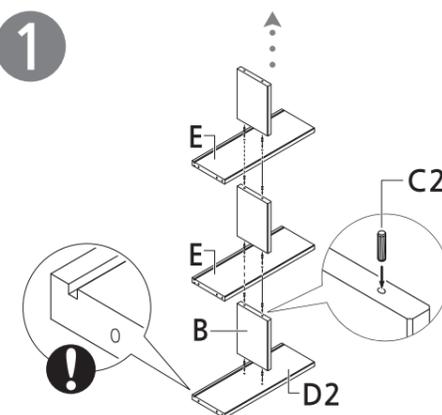


! Make sure Cam Holes are on the underside of the shelves Repeat on opposite side


* The tool required.

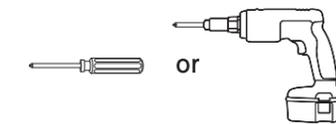


2

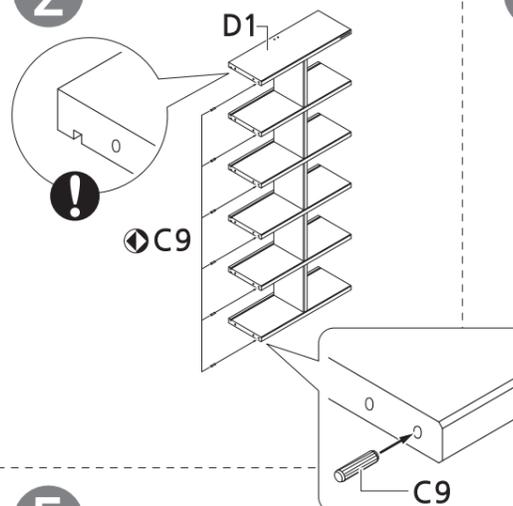


3

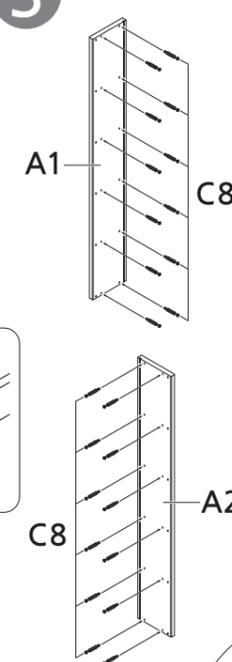


4

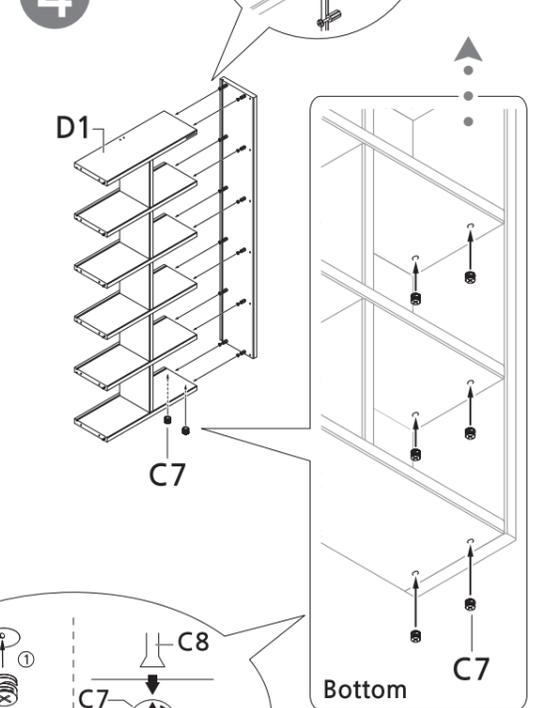


5

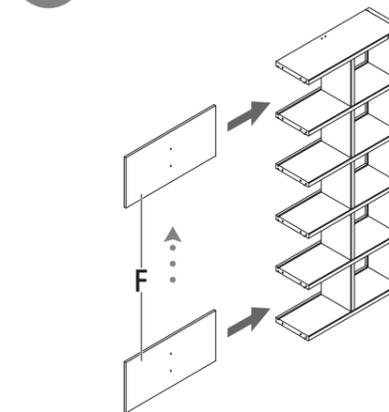

6

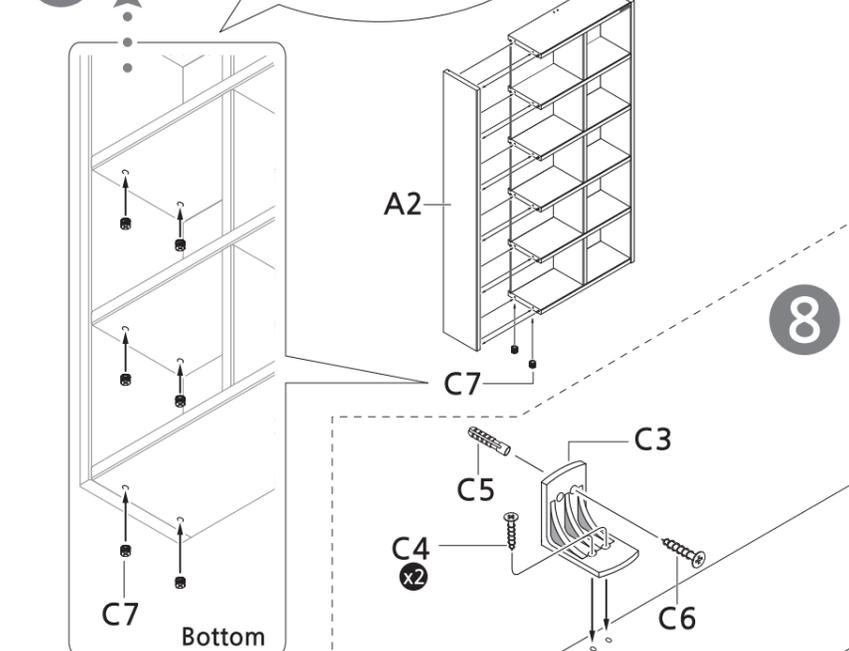

7 Rear

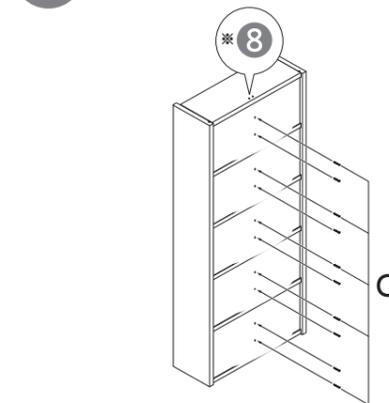

8

* Drill hole in the wall for Conical Anchor (C5).