




Boraam Industries

JAMIE COUNTER STOOL TYPE B Assembly instructions


- **Tools Included**
- **Do not throw away packing materials until assembly is complete**
- **Assemble this item on a soft, clean surface to protect the product**
- **Proper assembly requires 2 people**
- **Make sure all parts are included prior to assembly**

PART LIST		
NO.	DESCRIPTION	QTY
A	Chair back	01
B	Chair seat frame	01
C	Front leg right	01
D	Front leg left	01
E	Front stretcher	01
F	Side stretcher right	01
G	Side stretcher left	01


PART LIST			
NO.	DESCRIPTION	SKETCH	QTY
1	JCBC Bolt M6 x 75mm		04
2	JCBC Bolt M6 x 50mm		04
3	JCBC Bolt M6 x 40mm		03
4	Spring Washer M6		11
5	Flat Washer M6 x19mm		11
6	Allen key 4mm		01
7	Wood screw Ø4x38mm		06

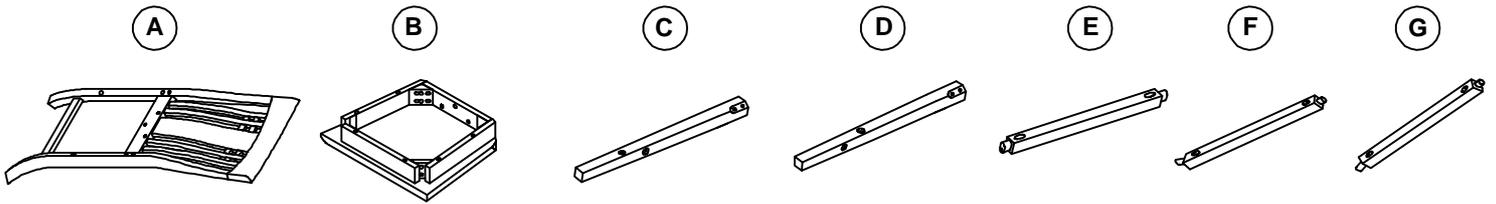


STEP 1:

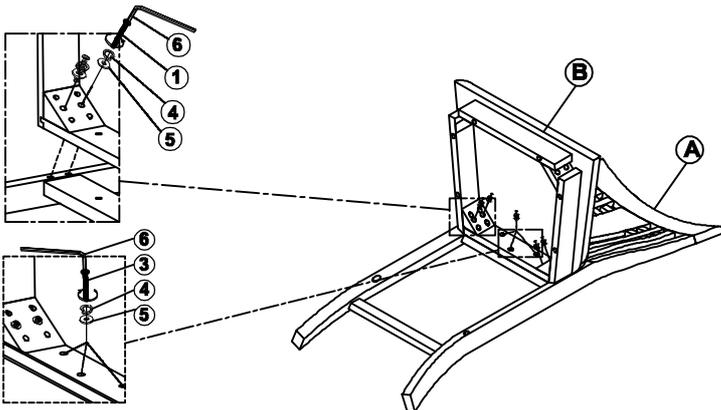

STEP 2:

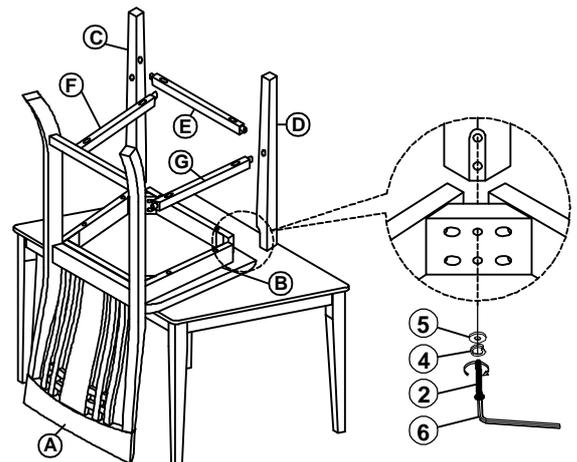

STEP 3:

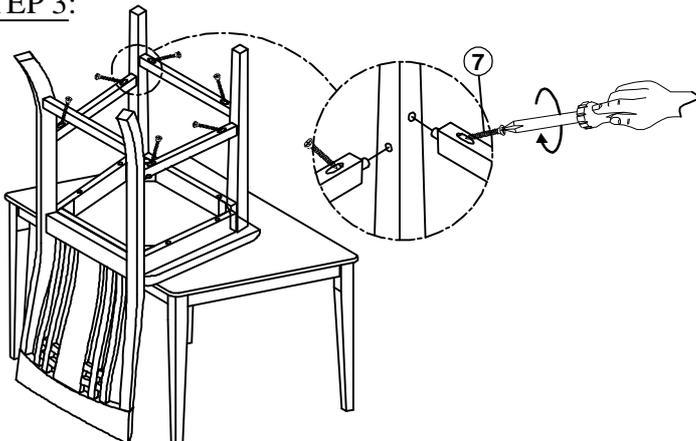

ASSEMBLY COMPLETED

