




Boraam Industries
MONTANA DINING BENCH
ASSEMBLY INSTRUCTIONS

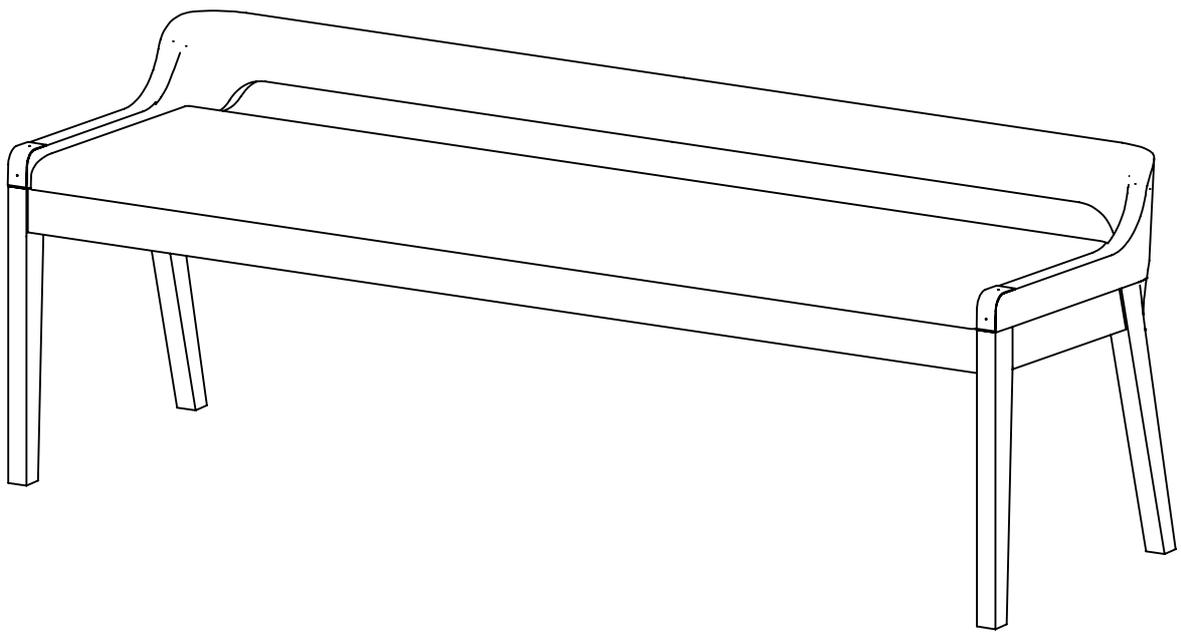



PLEASE READ ME FIRST



- Have questions about assembling your item?



- Item or parts damaged?



- Missing a part?



- We're here to help!



(847)949-6300 (M-F, 9am-5pm CST)




www.boraamindustries.com




customerservice@boraamindustries.com




8PCS
M8*10

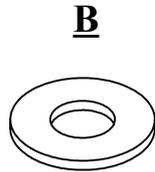


8PCS
M8*19

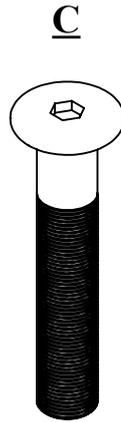

8PCS
M8*45

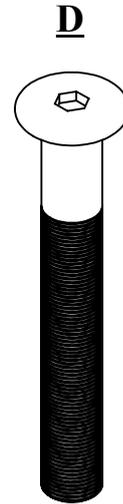


6PCS
M8*60

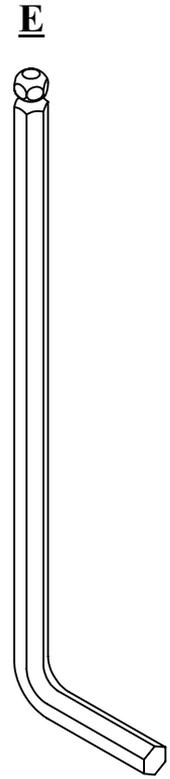


1PC
Allen Wrench
M4*110


①

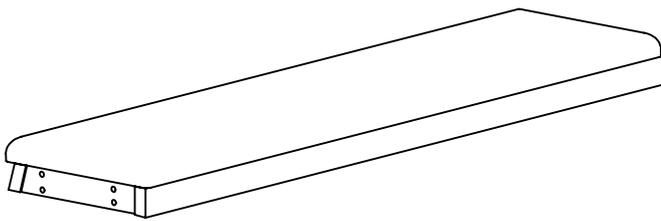

②

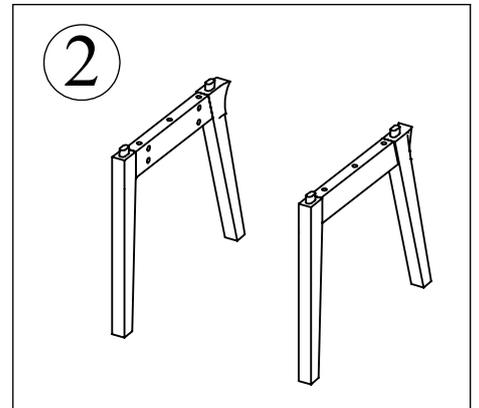


③

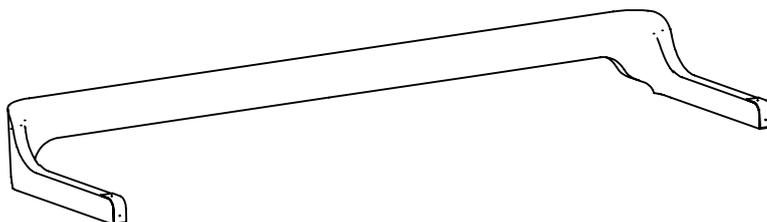


01


A 	B 	C 
8PCS M8*10	8PCS M8*19	8PCS M8*45

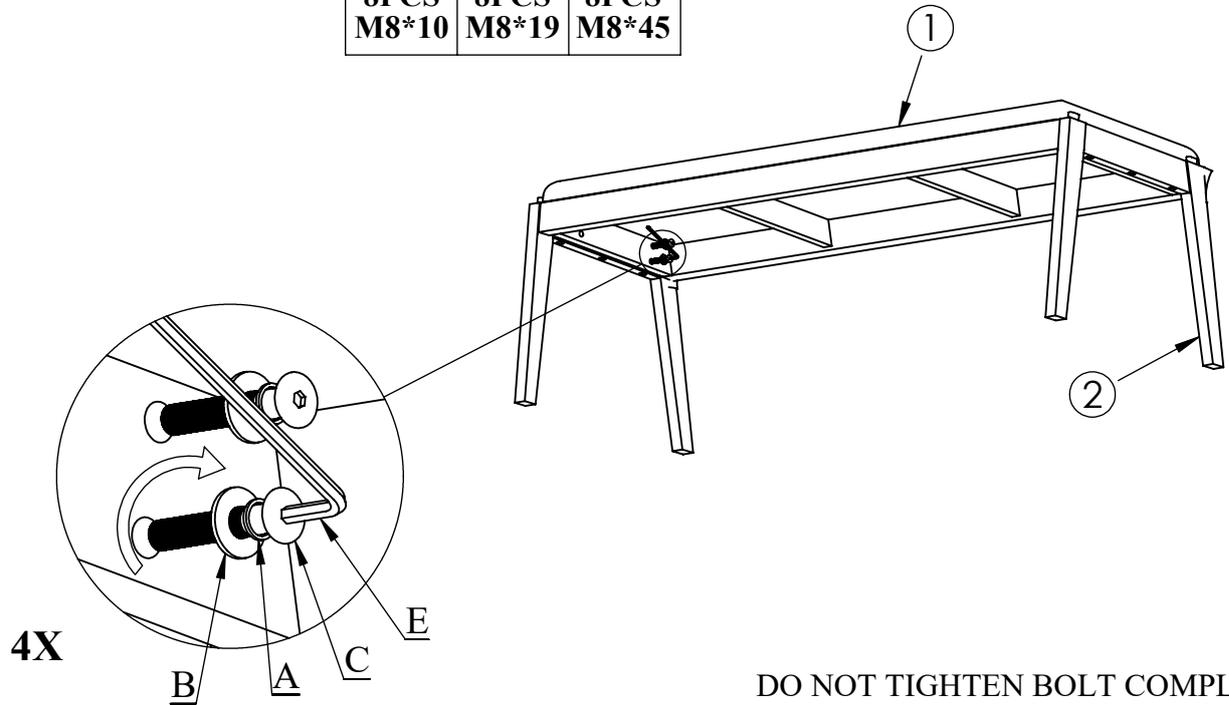


02

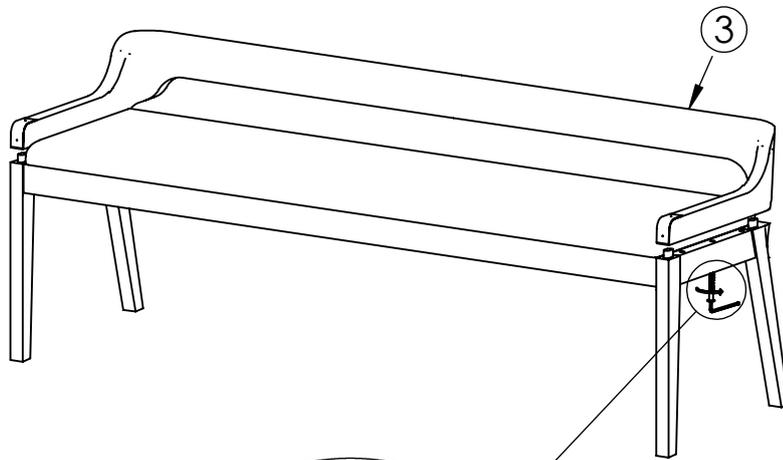

D 
6PCS M8*60

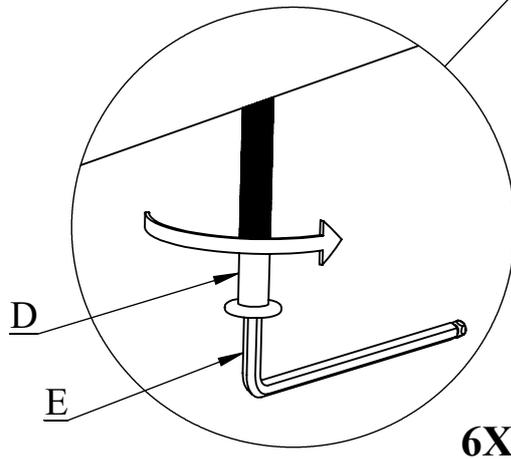

DO NOT TIGHTEN BOLT COMPLETELY

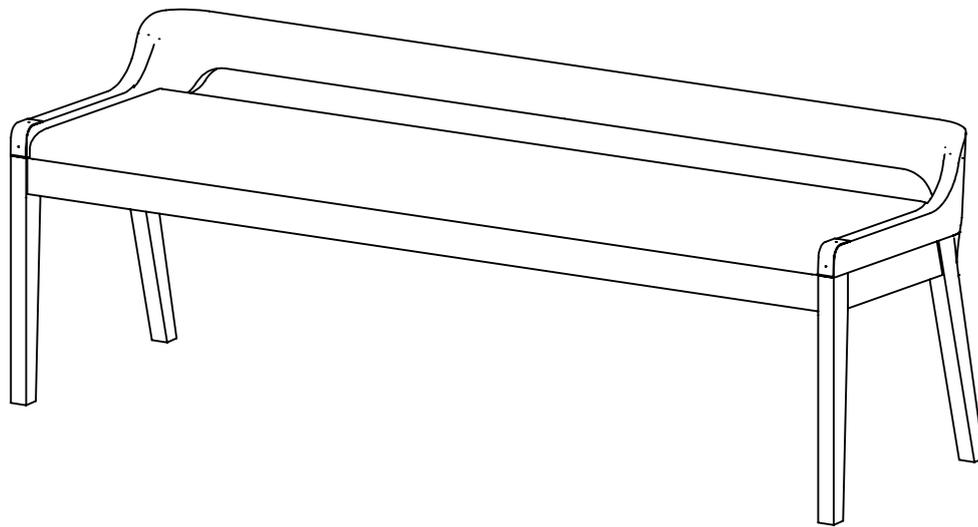

BE SURE TO CHECK ALL BOLTS SECURELY
TIGHTENED PRIOR USING THIS BENCH