

















ASSEMBLY INSTRUCTIONS


95132 / 95133

HARDWARE LIST


NO	SKETCH	SKETCH	SIZE	QTY
1		Flat Washer	M8*16mm	23PCS
2		Spring Washer	M8	23PCS
3		Bolt	25mm*M8	12PCS
4		Allen Key	M5	1PC
5		Bolt	45mm*M8	11PCS
6		Wood Screw	35mm*M8	6PCS
7		Screw Driver		Not provided

PARTS LIST


NO	SKETCH	DESCRIPTION	QTY
A		Headboard	1PC
B1		Left Headboard Leg	1PC
B2		Right Headboard Leg	1PC
C		Connecting Bar	2PCS
D		Footboard	1PC
E		Slat Support Leg	3PCS
F		Headboard & Footboard Leg	4PCS
G		Flat Slat	3PCS
H		Side Rail	2PCS

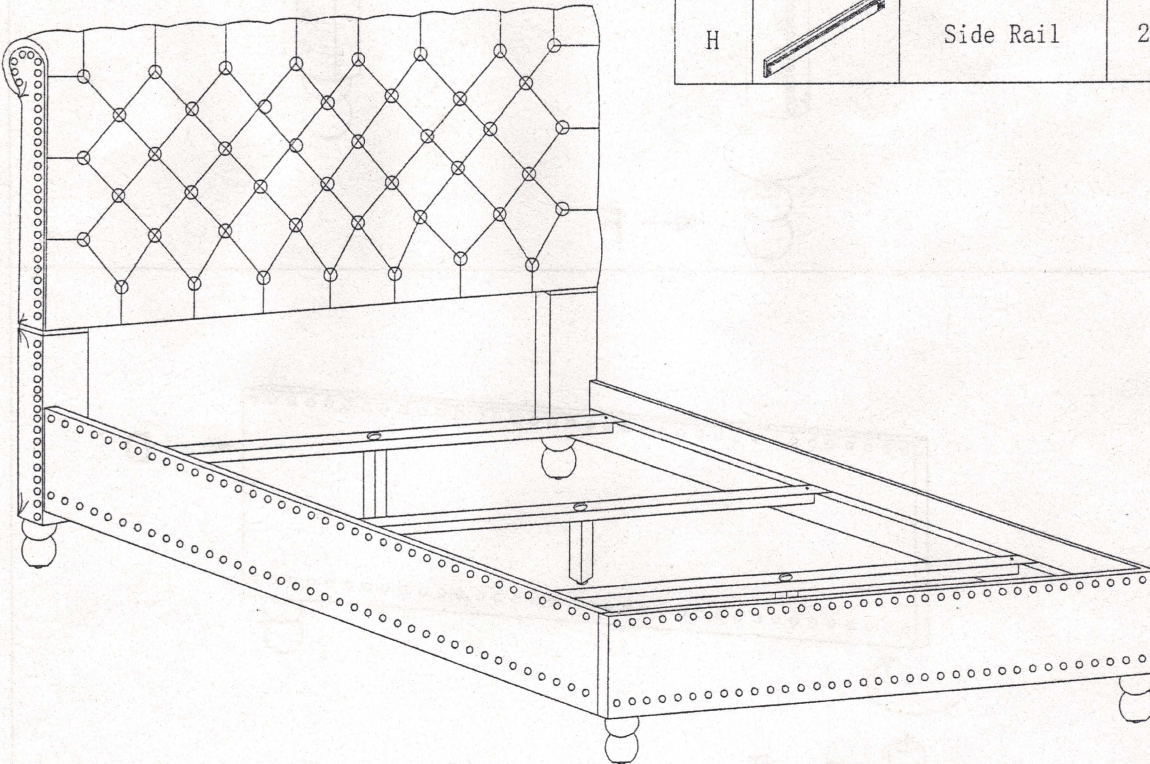


Step 1.

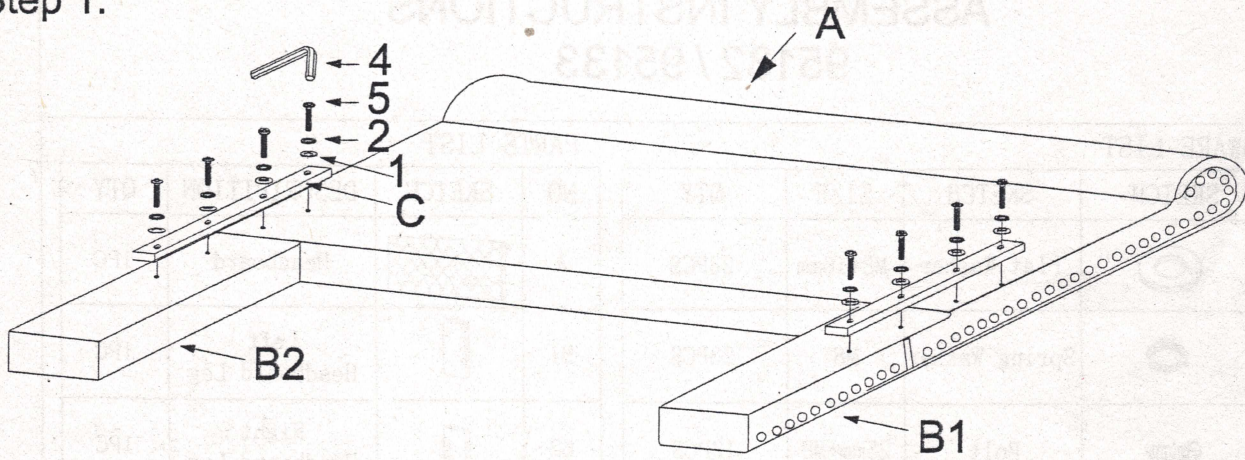


Step 2.

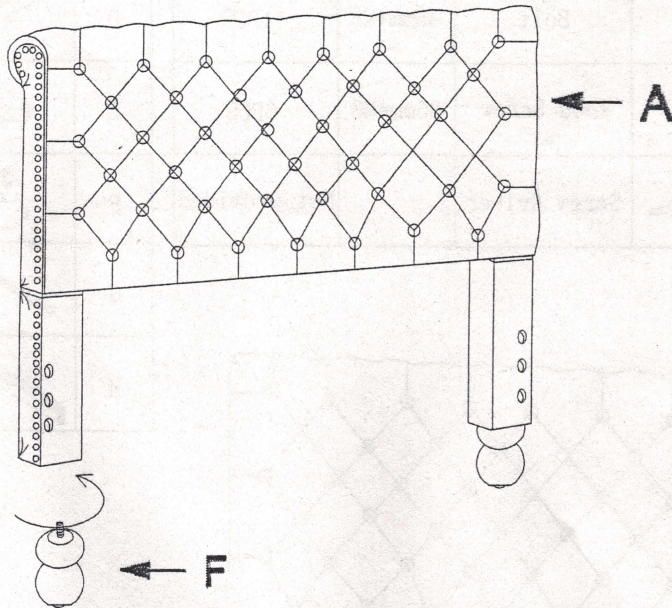


Step 3.

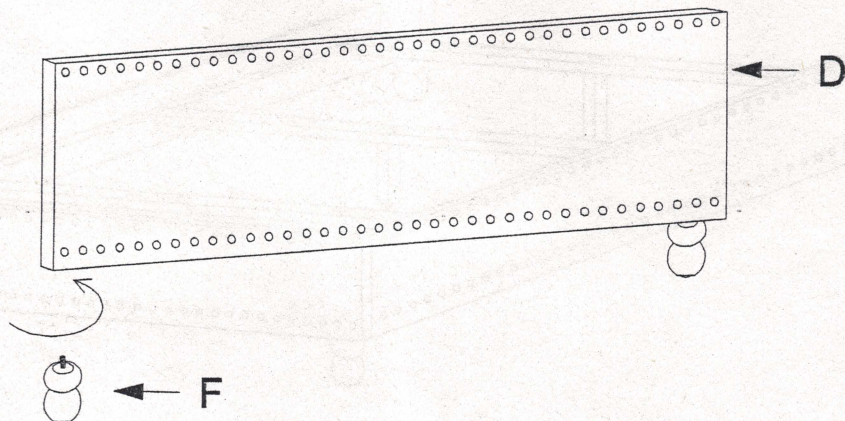


Step 4.

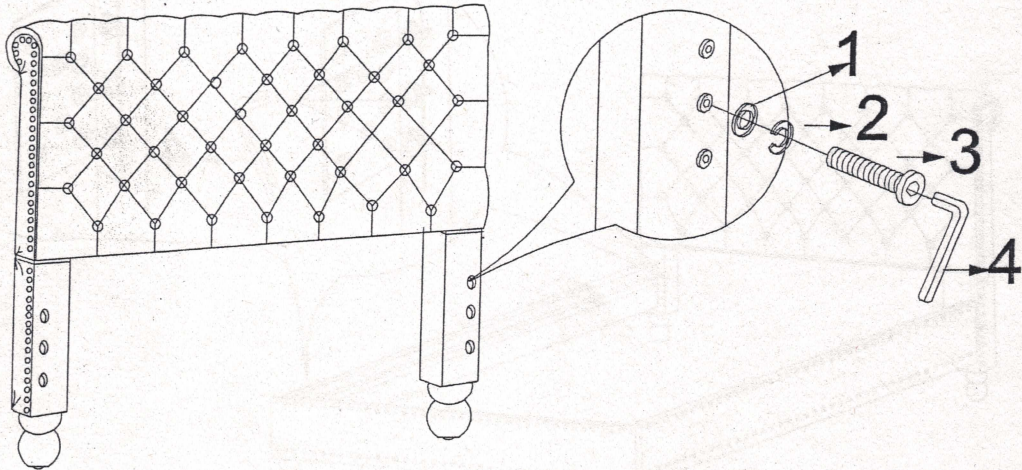


Step 5.

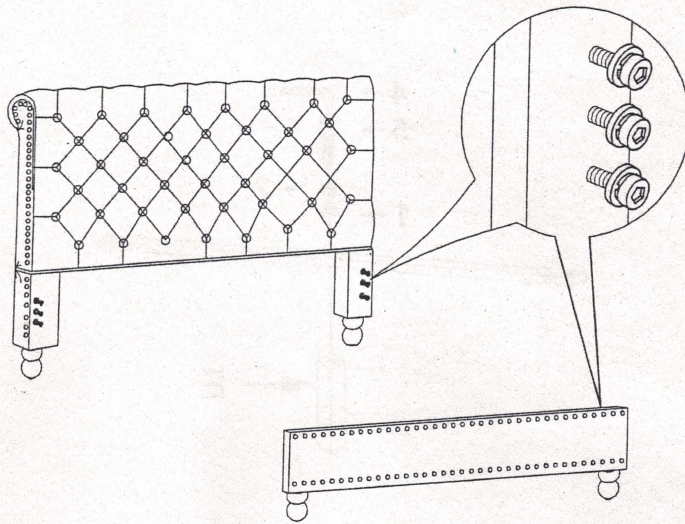


Step 6.

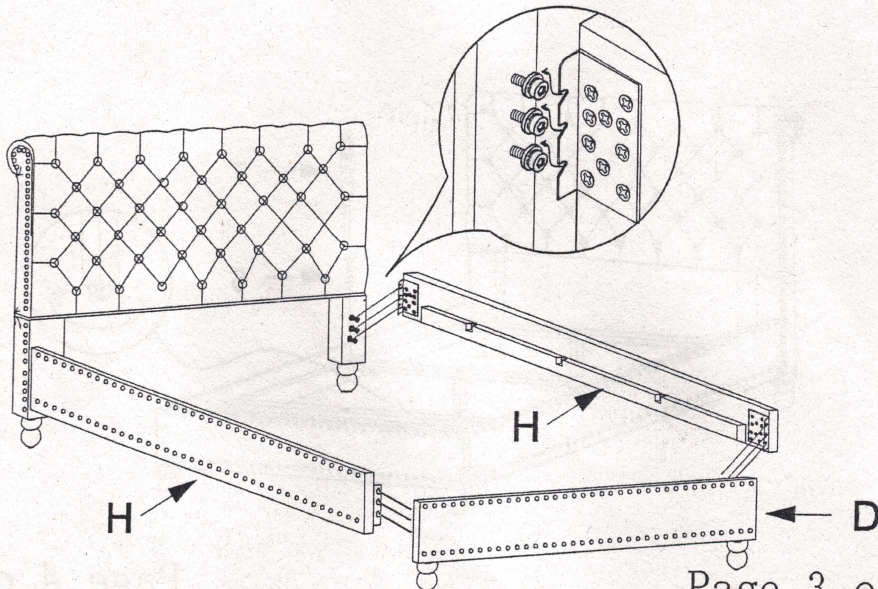

Step 7

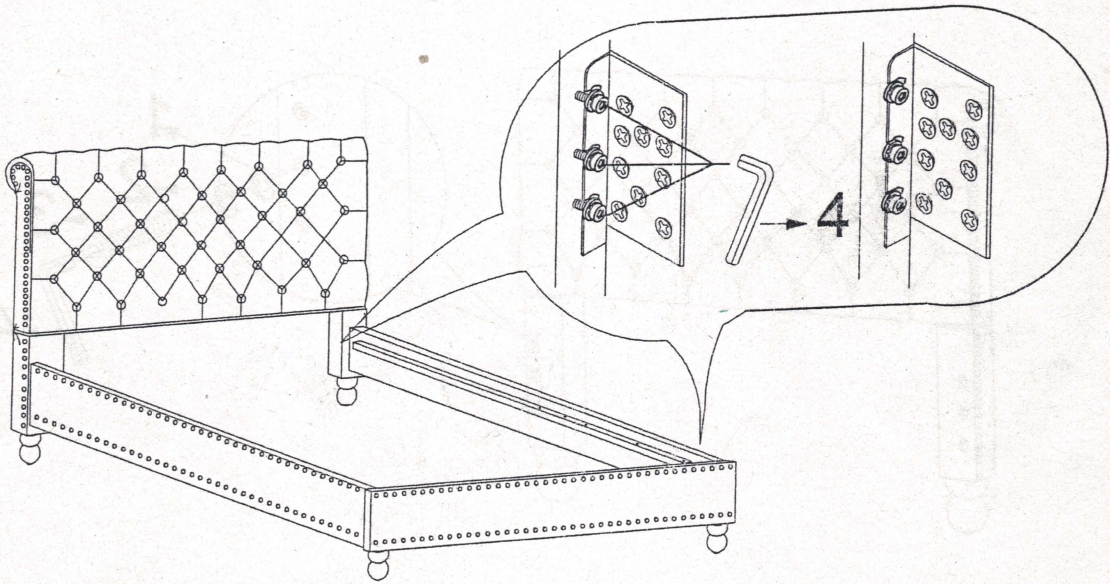

Step 8.

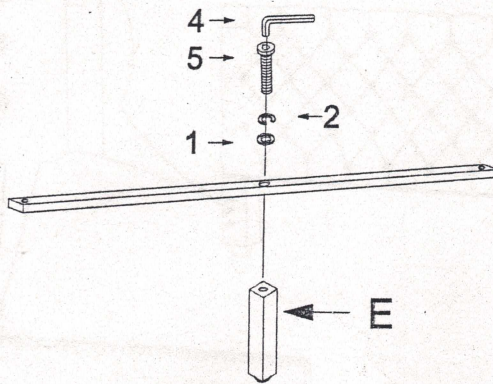

Step 9.

